

安全上のご注意

■安全に使用していただくための表示と意味について カムボジショナを安全に使用していただくために、 注意事項を次のような表示と図記号で示しています。 ここで示した注意事項は、安全に関する重大な内容を記載しています。

必ず守ってください。

表示と意味は次のとおりです。

▲ 警告	誤った取り扱いをすると、 人が死亡または重傷を負う可能性が 想定される内容を示します。
⚠ 注意	誤った取り扱いをすると、 人が傷害を負ったり、物的損害の発生が 想定される内容を示します。

●図記号の説明



◇記号は禁止を意味しています。 具体的な内容は、◇の中と文章で示します。 左図の場合は、「分解禁止」を表します。



△記号は注意(警告を含む)を意味しています。
具体的な内容は、△の中と文章で示します。
左図の場合は、「感電注意」を表します。

0

●記号は強制(必ず守ること)を示します。 具体的な内容は、●の中や近くに絵や文章で示します。 左図の場合は「一般的な強制事項」を示します。



使用上のお願い

- ●信号線の断線、瞬時停電による異常信号などに備えて、ご使用者側でフェ ールセーフ対策を施してください。
- ●ユーザーズマニュアルで指定した電源電圧で使用してください。
- ●電源事情が悪い場所では特に、定格の電圧(や周波数)の電源を供給できるようにしてご使用ください。
- ●外部配線の短絡に備えて、ブレーカなどの安全対策を施してください。
- ●耐電圧試験は、機能接地端子を外して行ってください。
- ●据え付け工事の際には、必ず第3種接地をしてください。
- ●本製品を分解して修理や改造はしないでください。
- ●ラベルを付けたまま配線してください。
- ●記線後は、放熱のため必ずラベルを外してください。
- ●配線は、圧着端子を付けてください。
- 撚り合わせただけの電線を直接、端子台に接続しないでください。
- ●記線を十分に確認してから通電してください。
- ●正しく配線してください。
- ●ケーブルのコード部にものを載せないでください。
- ●ケーブルを無理に曲げたり、引っ張ったりしないでください。
- ●接地された金属に触るなどして人体の静電気を放電させてから、ユニットに触れてください。
- ●本体の取付けねじ、端子台のねじ、ケーブルのねじはユーザーズマニュアルで指定した規定トルクで締め付けてください。DINレールの取付けはフックがロックするまで、本体を押し込んでください。
- ●ケーブル等ロック機構のあるものは、必ずロックしていることを確認して からご使用ください。
- ●次のことを行う時は、本体の電源をOFFにしてください。
 - ・装置を組み立てる時
 - ・スイッチを設定する時
 - ・ケーブルを接続、配線する時
 - コネクタを取り付けたり、取り外したりする時
- ●作成したカムプログラム、パラメータ、スイッチの設定は、十分な動作確 認を行った後、本運転に移行してください。
- ●次の操作は、設備に影響がないことを確認した上で、行ってください。
 - 本体の動作モード切替え
 - ・原点補正
 - 実行バンクの切替え
- ●本体を設置したときは原点位置の調整を行ってから、運転に移行してく ださい。
- ●本体のレゾルバ回転数仕様範囲を超えて使用しないでください。
- ●本体を交換した場合は、全てのパラメータ、カムプログラムを交換したカムボジショナから転送して、運転を再開してください。
- ●入力端子に定格電圧を超える電圧を印加しないでください。
- ●出力端子、カム出力コネクタに最大開閉能力を超える電圧の印加および 負荷の接続をしないでください。
- ●電源遮断後、1分間は端子部に触れないでください。

正しい使い方

●ユーザーズマニュアルに示す通り、正しく設置してください。

- ●次のような環境には設置しないでください。
 - ・日光が直接当たる場所
 - ・周囲温度や相対湿度が仕様値の範囲を超える場所
 - 温度の変化が急激で結露するような場所
 - ・腐食性ガス、可燃性ガスのある場所
 - ・ちり、ほこり、塩分、鉄粉が多い場所
 - ・水、油、薬品などの飛沫がかかる場所
 - ・本体に直接振動や衝撃が伝わる場所
- ●次のような場所で使用する際は、遮蔽対策を十分に行ってください。
 - ・静電気などによるノイズが発生する場所
 - ・強い電界や磁界が生じる場所
 - ・放射能を被ばくする恐れのある場所
 - ・電源線が近くを通る場所

関連のユーザーズマニュアル

名称/形式	カタログ番号
カムボジショナ/形3F88L-160/162	SBCE-301

オムロン株式会社

営業統轄事業部

東京都品川区大崎 1-11-1 ゲートシティ大崎ウエストタワー 14F(〒141-0032)

●FA機器の技術的なお問い合わせは下記をご利用ください。
 東京/03-3448-8116 名古屋/052-953-9824 大阪/06-6348-9650
 営業時間:8:45~19:00(土・日・祝祭日 8:45~17:00)
 営業時間:年末・年始を除く

お断りなく仕様などを変更することがありますのでこ了承ください。

3F88L-160/162 Cam Positioner Safety Precautions

OMRON

OMRON Corporation

©OMRON Corporation 1999 All Rights Reserved

1607575-7A

Thank you for purchasing an OMRON 3F88L-160/162 Cam Positioner. To ensure safe operation, please be sure to read the safety precautions provided in this document along with all of the user's manuals for the Cam Positioner and related Units. Please be sure you are using the most recent versions of the user's manuals for your Unit. Contact your nearest OMRON representative to obtain manuals. Keep these safety precautions and all user's manuals in a safe location and be sure that they are readily available to the final user of the products.

Caution Definition of Precautionary Information Install external breakers and take other safety measures against short-circuiting in external wir-ing. Indicates an imminently hazardous situation which, if not avoided, will result in death or serious /!\ Caution Disconnect the functional ground terminal when injury. performing withstand voltage tests. Indicates a potentially hazardous situation which, Caution Always connect to a ground of 100 Ω or less when if not avoided, could result in death or serious installing the Unit. iniurv. Caution Do not attempt to disassemble, repair, or modify ✓!\ Caution Indicates a potentially hazardous situation which, the Unit. if not avoided, may result in minor or moderate injury, or property damage. Caution Leave the label attached to the Unit when wiring. Precautions Caution Remove the label after the completion of wiring to ensure proper heat dissipation. **General Warnings** /!\ Caution Use crimp terminals for wiring. Do not connect Do not attempt to disassemble the Unit while bare stranded wires directly to terminals. power is being supplied. Doing so may result in electrical shock. /!\ Caution Thoroughly check all wiring before turning ON the power supply. Do not touch any of the terminals while power is being supplied. Doing so may result in electrical ✓!\ Caution Wire all connections correctly. shock. /!\Caution Do not place objects on top of the cables or other Take safety measures outside the Cam Positioner wiring lines. to ensure safety for the entire system in the event of Cam Positioner failure or error caused by ✓!\ Caution Do not pull on the cables or bend the cables beexternal factors of the Carn Positioner. yond their natural limit. Faulty operations may result in serious accidents. /!\Caution Before touching a Unit, be sure to first touch a · Emergency stop circuits, interlock circuits, limit grounded metallic object in order to discharge any circuits, and similar safety measures must be static build-up. included in control circuits outside the Cam Positioner. /!\ Caution Be sure that all the mounting screws, terminal The Cam Positioner turns OFF all outputs when screws, and cable connector screws are tightits self-diagnostic function detects an error (ERened to the torque specified in the user's manual. ROR is OFF), when TRIG input turns ON, or For DIN track mounting, push the Cam Positioner when RESET input turns ON. Take safety meaforward until the lock snaps into place. sures outside the Cam Positioner to ensure \ Caution Be sure that cables and other items with locking safety for the entire system in such an event. devices are properly locked into place. The Cam Positioner output may remain ON or OFF due to damage to an output transistor or for /!\ Caution Always turn OFF the power supply to the Unit besome other reason. Take safety measures outfore attempting any of the following. side the Cam Positioner to ensure safety for the Assembling the Unit. entire system in such an event. · Setting switches. **General Precautions** Connecting cables or wiring the system. /!\ Caution Fail-safe measures must be taken by the custom- Connecting or disconnecting the connectors. er to ensure safety in the event of incorrect, mis-/!\ Caution Thoroughly check the newly created cam prosing, or abnormal signals caused by broken signal grams, parameter settings, and switch settings for lines, momentary power interruptions, or other proper execution before actually running them. causes. /!\ Caution Confirm that no adverse effect will occur in the √!\ Caution Always use the power supply voltages specified in system before attempting any of the following. the user's manuals. Switching the operating mode of the Unit

/!\ Caution

/! Caution Take appropriate measures to ensure that the specified power with the rated voltage and frequency is supplied. Be particularly careful in locations where the power supply is unstable.

When installing the Unit, adjust the origin before starting operation.

Origin compensation

Switching the execution bank

Caution	Be sure that the number of resolver rotations is al- ways within the allowable range.
Caution	When replacing the Unit, transfer all the parame- ters and cam programs from the old Unit to the new Unit before restarting operation.
Caution	Do not apply voltages to the input terminal in excess of the rated input voltage.
1 Caution	Do not apply voltages or connect loads to the out- put terminal or cam output connector in excess of the maximum switching capacity.
Caution	Do not touch the terminals for one minute after the power is turned OFF.

Installation Precautions

/!\ Caution

/!\ Caution

Install the Unit property as specified in the user's manual.

Caution Do not

Do not install the Unit in the following locations.

- · Locations subject to direct sunlight,
- Locations subject to temperatures or humidity outside the range specified in the specifications.
- Locations subject to condensation as the result of severe changes in temperature.
- Locations subject to corrosive or flammable gases.
- Locations subject to dust (especially iron dust) or saits.
- Locations subject to exposure to water, oil, or chemicals.
- · Locations subject to shock or vibration.

Take appropriate and sufficient countermeasures when installing the Unit in the following locations.

- Locations subject to static electricity or other forms of noise.
- Locations subject to strong electromagnetic fields and magnetic fields.
- Locations subject to possible exposure to radioactivity.
- Locations close to power supplies.

Reference Manuals

Name	Cat. No.
3F88L-160/162 Cam Positioner User's Manual	O-008

受領いたしました オムロン株式会社 99年 7月21日				
担当	照在	認可		
(53.)3MC33	CtANCMI-F	50%KM1-F-		
(99.7.21)	1987.21	99.7.21		
王本黄	主神田中	主件田中		

OMRON

OMRON Corporation Systems Components Division 66 Matsumoto Mishima-city, Shizuoka 411-8511 Japan Tei: (81)559-77-9633 Fax: (81)559-77-9097

Regional Headquarters OMRON EUROPE B.V.

Wegalaan 67-69, NL-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300 Fax: (31)2356-81-388

Note: Specifications subject to change without notice. Printed in Japan

OMRON ELECTRONICS, INC. 1 East Commerce Drive, Schaumburg, IL 60173 U.S.A. Tel: (1)847-843-7900 Fax: (1)847-843-8568

OMRON ASIA PACIFIC PTE. LTD. 83 Clemenceau Avenue, #11-01, UE Square, Singapore 239920 Tel: (65)835-3011 Fax: (65)835-2711