OMRON

アナログ入力ターミナル

形 DRT2-TSO4T/-TSO4P 温度入力ターミナル

™ DRT2-AD04H

取扱説明書

オムロン製品をお買い上げいただきありがとうございます。 ご希望通りの製品かお確かめいただき、この取扱説明書をよく読んでご理解の上 ご使用ください。 なお、この取扱説明書はお読みになった後も、いつも手元に置いてご使用くださ

この商品を安全に正しく使用していただくために、次のマニュアルを併せてご覧 ください

DeviceNet ユーザーズマニュアル(Man. No. SBCD-308)

DeviceNet DRT2 シリーズ スレーブマニュアル(Man. No. SBCD-324)

オムロン株式会社

©OMRON Corporation 2004-2014 All Rights Reserved.



安全上の要点

以下に示す項目は、安全を確保するために必ず守ってください。

- ●信号線の断線、瞬時停電による異常信号などに備えて、ご使用者側でフェールセーフ対策を 施してください
- ●製品を落下させたり、異常な振動・衝撃を与えないでください。
- ●参照マニュアルで指定した正しい電源電圧で使用してください。
- ●本紙および参照マニュアルに示す通り、正しく配線してください。
- ●通信距離については仕様の範囲内でご使用ください。
- ●通信線の接続には指定ケーブルをご使用ください。
- ●外部配線の短絡に備えて、ブレーカなどの安全対策を施してください。
- ●据え付け工事の際には、必ずD種接地(第3種接地)をしてください。
- ●次のことを行うときは、PC本体や全スレーブの電源と通信用電源を OFF にしてください。 ・I/Oユニットや CPU ユニット、メモリカセットの着脱をするとき
- ・装置を組み立てるとき
- ディップスイッチやロータリスイッチを設定するとき
- ケーブルを接続、配線するとき コネクタを取り付けたり取り外したりするとき
- ●ケーブルのコード部にものを載せないでください。
- ●ケーブルを無理に曲げたり、引っ張ったりしないでください。
- ●本製品を分解して修理や改造をしないでください。
- ●配線を十分に確認してから通電してください。
- ●配線は圧着端子を付けてください。撚り合わせただけの電線を、直接端子台に接続しないで ください。
- ●製品に接続する配線材は必ず指定のものを使用してください。
- 端子台:AWG22 16 (0.25 1.65 mm²)
- ●作成したユーザープログラムは、十分な動作確認を行った後、本運転に移行してください。
- ●運転時には、必ずスキャンリスト有効モードで使用してください。 ●リモート I/O の自由割付を設定した製品のスキャンリストをクリアする場合は、I/O エリア
- が固定割付エリアに変更されても問題ないことを確認してから行ってください。
- ●DIN レール取り付けを確実に行ってください。
- ●動作中にネットワークに新たなノードを追加する場合は、通信速度が一致していることを確 認してから行ってください。
- ●通信ケーブルは動力線、高圧線からはなしてください。
- ●端子の極性を確認して、正しく配線して下さい。
- ●端子台のねじ、ケーブルのねじは参照マニュアルで指定した規定トルクで締めてください。
- (通信コネクタのねじ:0.25~0.3N m、端子ねじ:0.3~0.5N m) ●冷接点補償器は触れたり、外したりしないでください。正常な温度データを示さなくなり ます。

使用上の注意

●参照マニュアルに示す通り、正しく設置してください。

●次のような環境には設置しないでください。

- 日光が直接当たる場所
- ・周囲温度や相対湿度が仕様値の範囲を超える場所 温度の変化が急激で結露するような場所
- ・腐食性ガス、可燃性ガスのある場所
- ちり、ほこり、塩分、鉄粉が多い場所
- 水、油、薬品などの飛沫がかかる場所
- 製品に直接振動や衝撃が伝わる場所
- ●次のような場所で使用する際は、遮蔽対策を十分に行ってください。 静雷気などによるノイズが発生する場所
- 強い電界や磁界が生じる場所
- 放射能を被曝する恐れのある場所
- 電源線が近くを通る場所
- 通雷中は、端子に触れないでください。感雷の恐れがあります。
- ●通電中は、製品を分解したり内部に触れたりしないでください。感電の恐れがあります。
- ●ウォームアップ時間は 30 分以上としてください。
- 清掃について

・シンナー類は装置表面を溶かしたり、変色させたりしますので絶対に使用しないでください。

仕様
宁故

●定格					
通信電源電圧	DC11~25V(j	通信コネクタより供給)			
消費電流	70mA 以下(D0	70mA 以下(DC24V)			
耐電圧	AC500V 1 分	間			
	(1)非充電金	属部(DIN レール・NC 端	子) - 充電金属部		
	(2) DeviceNe	tコネクタ端子一括 – 1	アナログ入力端子一括		
	(3)各アナロ	グ入力端子間			
絶縁抵抗	20MΩ以上(补	20MΩ以上(初期値)(DC100Vメガ、絶縁されている回路間)			
使用周囲温度	-10~+55°C(ただし、氷結、結露のな	ないこと)		
使用周囲湿度	相対湿度 25-	~85%			
質量	160g以下				
●性能					
・形 DRT2-TS	04T/-TS04P				
形式	C	RT2-TS04T	DRT2-TS04P		
入力点数		4 点			
入力種別	R, S, K1, K2, J	1, J2, T, E, L1, L2, U, N,	Pt100, JPt100		
	W, B, PL II				
指示精度	(±0.3%PVま	たは±1℃の大きい	-200~650/850°Cレンジ時		
	方) ±1 ディ	ジット以下	(±0.3%PV または±0.8℃の大きい方)		
	%1		±1 ディジット以下		
			-200~200℃レンジ時		
			(±0.3%PV または±0.5℃の大きい方)		
			±1 ディジット以下		
変換周期		250m	s/4 点		
絶縁方式	フォ	フォトカプラ絶縁(入力と通信ライン間および各入力信号間)			
指示精度の例外	事項				
入力種別	と条件		指示精度		
K1,T,Nの-100℃以下とL1,L2,U		±2℃±1 ディジット以下			
R,Sの200℃以1	~	±3℃±1ディジット	以下		
Bの 400℃以下		規定なし			
W			Cの大きい方) ±1 ディジット以下		
PLI		(±0.3%PV または±2°	Cの大きい方) ±1 ディジット以下		

※1 形DRT2-TSO4Tには端子台に冷接点補償器が付属している為、端子台と製品本体の シリアルNo.が一致しない場合は、取付方向によって精度保証値が異なります。詳細は ユーザーズマニュアルを参照下さい。

. #ź DRT2_AD04H

AD0411				
	電圧入力	電流入力		
	4	点		
	0~5V, 1~5V, 0~10V	0~20mA, 4~20mA		
	±15V	± 30 mA		
ダンス	1MΩ以上	約 250 Ω		
	1/30000(フルスケール)			
25°C	±0.3%FS	±0.4%FS		
-10~55°C	±0.6%FS	±0.8%FS		
	250ms/4 点			
絶縁方式 フォトカプラ絶縁(入力と通信ライン間および				
	ダンス 25°C	電圧入力 4 0~5V, 1~5V, 0~10V ±15V ダンス 1MΩ以上 1/30000(1 25°C ±0.3%FS -10~55°C ±0.6%FS 250m		

■各部の名称および外形寸法

๒

(形 DRT2-TS04T/-TS04P/-AD04H 共通:単位 mm)

脱着式端子台





0FF	0FF	0FF	0FF	Pt	0FF	0FF	
ON	0FF	0FF	0FF	JPt	ON	0FF	OFF 固
0FF	ON	0FF	0FF	Pt2	0FF	ON	ULL F
ON	ON	OFF	OFF	JP+2	ON	ON	

SW3.4 は必ずOFF で使用してください。

J2	ON	0FF	ON	0FF	
T	0FF	ON	ON	0FF	
E	ON	ON	ON	0FF	
L1	0FF	0FF	0FF	ON	
L2	ON	0FF	0FF	ON	
U	0FF	ON	0FF	ON	
N	ON	ON	0FF	ON	
W	0FF	0FF	ON	ON	
В	ON	0FF	ON	ON	
PL	0FF	ON	ON	ON	
設定不可	ON	ON	ON	ON	
●SW5:表	示桁数	設定 T	ード	工場出	, 古時:OFF)
	表示	設定		SI	N5
1/100 表示				0	N
通常表示				0	FF
●SW6 : °C	:∕°F∄	長示設定	こ モー	ド(工均	<u></u>
	表示	設定		SI	<i>W</i> 6
°F表示				0	N
℃表示				0	FF
SW7 : DR	T1互換	モート	í (1/10	0 表示)(工場出荷時:0FF)
	動作	設定		SI	N7
DRT1 互換重	助作(1/10	0 表示)		0	N .
通常動作				0	FF
●SW8:入	力種別	の設定	方法遗	選択(エ	_場出荷時:OFF)
]]	しカ種別の)設定方法		SI	//8
ディップス	イッチに	よる設定		0	N
コンフィグ	レータに	よる設定		0	FF

DRT2-AD04H

4.3

29.9

●SW1~SW6:人力	」レンジ設	定(工場	出何時:	SW1~6:0F	·F)
		入力 0, 1			入力 2,3

						7 17 5 -1 -	
	入力レンジ	SW1	SW2	SW3	SW4	SW5	SW6
	0–5V	0FF	0FF	0FF	0FF	0FF	0FF
	1–5V	ON	0FF	0FF	ON	0FF	0FF
	0-10V	0FF	ON	0FF	0FF	ON	0FF
	4-20mA	0FF	0FF	ON	0FF	0FF	ON
	0-20mA	ON	0FF	ON	ON	0FF	ON
	設定不可		上記以外			上記以外	
Ć	▶SW7:未使用						

SW8	:	入力レ	ンジの設定方法	去選択(工場	出荷時:OFF)

入力レンジの設定方法	SW8	
ディップスイッチによる設定	ON	
コンフィグレータによる設定	0FF	
		· .

※ディップスイッチの設定は電源投入時に読み込みます。

DIN レール取り付けフックを使用して DIN35mm のレールに取り付けることができます。 静電気による故障を避けるために、偶発的に人が触らない場所に取り付けてください。

■表示部

MS および NS	MS および NSの表示の意味は次の通りです。							
LED 種別	LED 表示色	状態	状態定義					
	緑	点灯	正常状態					
MS	赤	点灯	致命的な故障					
mo	9h	点滅	軽微な故障					
	-	消灯	電源供給なし					
	緑	点灯	オンライン/通信接続完					
	गण्म	点滅	オンライン/通信未接続					
NS	赤	点灯	致命的な通信異常					
	<u>م</u> ر	点滅	軽微な通信異常					
	_	消灯	オフライン/電源 0FF 状態					

■ロータリスイッチの設定(工場出荷時:#00)

ネットワーク内の他のノード(マスタ、スレーブ)とノードアドレスが重複しない限り、ノード アドレスを範囲内で自由に設定することができます。

温度・アナログ入力ターミナルでは、ノードアドレス(10 進数)の 10 の桁を左のロータリスイ ッチで、1の桁を右のロータリスイッチで設定します。また、64~99に設定すると、コンフィ



グレータによりノードアドレスを設定することが可能です。

●SW1~SW4:入力種別設定(工場出荷時:SW1~4:0FF)

※ロータリスイッチの設定は電源投入時に読み込みます。

■ディップスイッチの設定

DRT2-TS04T/-TS04P

T S O 4 T

R

S

K1

TS04P 入力種別 SW1 SW2 SW3 SW4 入力種別 SW1 SW2 SW3 SW4 固定

- ノードアドレス設定(×1)

-ノードアドレス設定(×10)

■配線 ●端子配列および配線

形DRT2-TS04T

~~ 冷接点補償器は触れたり、外したりしないでください。正常な温度データを示さなくなり ます。



形DRT2-TS04P

		1	۶ 10	IN b	10	1	11 \	IN I	11 2	N	с	11	12	IN t	12	1	13	IN t	13 5
Γ	N	с	IN E	40 3	N	с	IN E	√1 З	N	с	N	с	IN E	12	N	с	۱N E	43 3	

形DRT2-AD04H









-電流入力時 (電流入力時は、V+端子と↓+端子を短絡)

EU 指令への適合について

■ 対応指令

EMC 指令

■対応指令の考え方

● EMC 指令

オムロンの EU 指令適合商品は、各種機械、製造装置に組み込まれ使用される電気機器であ るため、組み込んだ機械、装置がより容易に EMC 規格に適合できるように、関連する EMC 規格の適合を図っています。よって、商品自身についての EMC 規格への適合性については 確認できますが、お客様の使用状態での適合性確認はできません。

EMC の性能は EU 指令適合商品を組み込んだ機器、制御盤の構成、配線状態、配置状態な どにより変化しますので、機械、装置全体での最終的な EMC 適合性の確認は、お客様自身 で実施していただくようお願いいたします。

- EU 指令への適応について
- 1.DeviceNetのEU指令適合品は、設置するにあたり、以下の注意が必要です。

DeviceNet ユニットは盤内蔵型として定義されるため、必ず制御盤内に設置してください。 2.通信電源、内部電源、I/O 電源として使用する DC 電源は、強化絶縁または二重絶縁された ものを使用してください。

3. DeviceNetのEU指令適合品は、共通エミッション規格(EN50081-2、EN61000-6-4)に適 合していますが、特に Radiated emission(10m 法)に関しては、ご使用になる制御盤の構 成、接続される他の機器との関係、配線などにより変化することがあります。したがって、 EU 指令適合品である DeviceNet をご使用の場合でも、お客様にて機械、装置全体で EU 指令適合性を確認し、対応していただく必要があります

<u>ご使用に際してのご承諾事項</u>

下記用途に使用される場合、当社営業担当者までご相談のうえ仕様書などによりご確認いた だくとともに、定格・性能に対し余裕を持った使い方や、万一故障があっても危険を最小に する安全回路などの安全対策を講じてください。

a)屋外の用途、潜在的な科学的汚染あるいは電気的妨害を被る用途またはカタログ、取扱説 明書等に記載のない条件や環境での使用

b)原子力制御設備、焼却設備、鉄道・航空・車両設備、医用機械、娯楽機械、安全装置、お よび行政機関や個別業界の規制に従う設備

c)人命や財産に危険が及びうるシステム・機械・装置

d)ガス、水道、電気の供給システムや 24 時間連続運転システムなど高い信頼性が必要な設備 e)その他、上記 a)~d)に準ずる、高度な安全性が必要とされる用途

*上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシート等最新版 のカタログ、マニュアルに記載の保証・免責事項の内容をよく読んでご使用ください。

オムロン株式会社



OMRO

1618394-0D

DRT2-TS04T/-TS04P Temperature Input Terminal DRT2-AD04H **Analog Input Terminal**

INSTRUCTION SHEET Thank you for purchasing this OMRON product. Please read this instruction sheet and thoroughly familiarize yourself with the functions and characteristics of the product before use. Please retain this sheet for future reference To ensure safe operation, please also read the following manuals DeviceNet Operation Manual (W267) DRT2-series DeviceNet Slaves Operation Manual (W404) OMRON Corporation ©OMRON Corporation 2004-2014 All Rights Reserved. SAFETY PRECAUTIONS Definition of Precautionary Information Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage. / WARNING Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or in property damage. Precautionary Information vide safety measures in external circuits (i.e., not in the Programmable Controller) including the following items, in order to ensure safety in the system if an abnormality occurs due to malfunction of the PC or another external factor affecting the PC operation.

Not doing so may result in serious accidents. • Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits. The PC will turn OFF all outputs when its self-diagnosis function detects any error or when a severe failure alarm (FALS) instruction is executed. As a countermeasure for such errors, external safety measures must be provided to ensure safety in the system.



Precautions for Safe Use

Items shown below are necessary for safe usage. Please note them carefully.

- Fail-safe measures must be taken by the customer to ensure safety in the event of incorrect, missing or abnormal signals caused by broken signal lines, momentary power interruptions, or other causes Failing to take appropriate measures may result in injury.
- Do not drop the product or subject it to excessive shocks or vibrations. Doing so may result in malfunction
- Always use the power supply voltage specified in the relevant manuals. An incorrect voltage may result in malfunction or burning.
- •Perform wiring correctly, in the way described in this document and in relevant manuals, Incorrect wiring may result in burning.

Do not extend connection distances beyond the ranges given in the specifications.

- Connect communications lines using the specified cables. Using other cables may result in malfunction.
- Install external breakers and take other safety measures against short-circuiting in external wiring. Insufficient safety measures against short-circuiting may result burning.
- Always connect to a class-3 ground (to 100Ω or less) when installing the Units. Not connecting to a class-3 ground may result in electric shock. Always turn OFF the power supplies and communications power supplies to the PC and all slaves
- before attempting any of the following. Not turning OFF the power supplies may result malfunction or electric shock
- Mounting or dismounting I/O Units, CPU Units, Memory Cassettes, or any other Units.

Assembling the Units.

 Setting DIP switches or rotary switches. · Connecting or wiring the cables.

· Connecting or disconnecting the connectors.

Do not place objects on top of the cables. Doing so may break the cables

- •Do not pull on the cables or bend the cables beyond their natural limit. Doing so may break the cables.
- •Do not attempt to disassemble, repair, or modify any Units. Any attempt to do so may result in malfunction fire or electric shock Double-check all the wiring before turning ON the power supply. Incorrect wiring may result in burning.

Ouse crimp terminals for wiring. Do not connect bare stranded wires directly to terminals. Connection of bare stranded wires may result in burning.

OUse the specified wiring materials for connecting to the product Terminal block : AWG 22 to 16 (0.25 to 1.65 mm²).

- Check the user program for proper execution before actually running it on the Unit. Not checking the program may result in an unexpected operation.
- Be sure to enable the scan list during actual operation. System errors may go undetected if operation s performed with the scan list disabled.
- Before clearing the scan list for a product with user-set remote I/O allocation, make sure that it is safe for the I/O area to change to a fixed allocation area. Not doing so may result in malfunction. ●Mount the Unit securely to a DIN track. Not mounting the Unit securely may result in malfunction

Before adding a new node to the network, make sure that the baud rate is the same as the other nodes in the network. Adding a node with a different baud rate setting may result in malfunction Wire the communications cables separately from the power lines or high-tension lines.

- Be sure to wire properly with correct polarity of terminals.
- •Be sure that all the terminal screws and cable connector screws are tightened to the torque specified

n the relevant manuals. (Communications connector screws : 0.25 to 0.3 N·m ; Terminal screws : 0.3 to 0.5 N·m)

•Do not touch or remove the cold junction conpensator, the correct temperature data is not indicated

Precautions for Correct Use

Install the Unit properly as specified in the relevant manuals. Improper installation of the Unit may result in malfunction ●Do not install the Unit in any of the following locations. Installing the Unit in the following locations

- may result in malfunction, electric shock, or burning. · Locations subject to direct sunlight.
- · Locations subject to temperatures or humidity outside the range specified in the specifications. · Locations subject to condensation as the result of severe changes in temperature.
- · Locations subject to corrosive or flammable gases.
- · Locations subject to dust (especially iron dust) or salts.
- · Locations subject to exposure to water, oil, or chemicals.
- · Locations subject to shock or vibration.
- Take appropriate and sufficient countermeasures when installing systems in the following locations. Inappropriate and insufficient measures may result in malfunction
- · Locations subject to static electricity or other forms of noise.
- · Locations subject to strong electromagnetic fields.
- · Locations subject to possible exposure to radioactivity. Locations close to power supplies.
- Do not touch any of the terminals or terminal blocks while power is being supplied. Doing either of these may result in electric shock.
- Do not attempt to take the product apart and do not touch any internal parts while the power is being supplied. Doing either of these may result in electric shock
- Make sure the product has 30 minutes or more for warm up.
- Cleaning : Never use paint thinner or other solvent to clean the product. Doing so might melt or discolor the surface.

Specifications

Ratings

Communications Pov	/er Vo l tage	11 to 25VDC (supplied	11 to 25VDC (supplied via the communications connector)		
Current consumption		70mA max (24VDC)	70mA max (24VDC)		
Dielectric strength		terminals) and cu (2)Across whole Dev analog input term (3)Across each analog	(1)Across non-current carrying metal parts (DIN track • NC terminals) and current carrying metal parts. (2)Across whole DeviceNet connecter terminals and whole analog input terminals (3)Across each analog input terminals		
Insulation Resistance		20MΩ min (Initial val (at 100VDC,across in:			
Ambient operating ter	nperature	-10 to +55°C(Avoid fre	eezing or condensation)		
Ambient operating hu	.midity	Relative Humidity 25 t	to 85%		
Weight		160 g max			
DRT2-TS04T/-TS04F Models		DRT2-TS04T	DRT2-TS04P		
Models		DRT2-TS04T	DRT2-TS04P		
Input Points			pints		
Input Type	,B,PL II	2,J1,J2,T,E,L1,L2,U,N,W	Pt100, JPt100		
Accuracy		PV or ±1°C which is ±1 digit max	At -200 to $650/850^{\circ}$ C range ($\pm 0.3\%$ PV or $\pm 0.8^{\circ}$ C which is gr eater) ± 1 digit max At -200 to 200° C range ($\pm 0.3\%$ PV or $\pm 0.5^{\circ}$ C which is gre ater) ± 1 digit max		
Conversion Cycle		250ms	/4 points		
Insulation method	Photoc		put and communications lines. Across out signals)		
Exception of Accur	асу				
Input Types and Co	nditions		Accuracy		
Less than -100°C o and L1,L2,U	i K1,T,N	±2°C±1 digit max.	•		
Less than 200°C of	R,S	±3°C±1 digit max.			
Less than 400°C of	В	no regulation			
W		\pm 0.3% PV or \pm 3°C which is greater) \pm 1 digit max			
**			hich is greater) ±1 digit max		

Note1 Since the cold junction concensator is assembled to the terminal block of DRT2-TS04T when the serial number of a terminal block and the main unit of a product is different, a guaranteed accuracy is specified separately depending on the mounting direction. Please refer to a user's manual for details.

		Voltage input	Current input			
Input Points	;	4 points				
Input Range		0 to 5V, 1 to 5V, 0 to 10V	0 to 20mA, 4 to 20mA			
Maximum signal input		±15V	±30mA			
Input impedance		1MΩ min	Approx 250Ω			
Resolution		1/30000(FS)				
Accuracy	25°C	±0.3% FS	±0.4% FS			
Accuracy	-10 to 55°C	±0.6% FS	±0.8% FS			
Conversion Cycle		250ms/4 points				
Insulation method		Photocoupler insulation (Across input and communications lines. Across each input signals)				

Nomenclature and External Dimensions

(DRT2-TS04T/-TS04P/-AD04H, Units : mm)



The Units can be mounted to 35-mm DIN track using DIN-track mounting hooks To prevent failures due to static electricity, do not mount the Units in locations prone to accidental human contact.

Indicators



Indicator	Color	Status	Meaning		
	Green	Lit	Normal operation		
MS	Red	Lit	Fatal error		
MO	Reu	Flashing	Non-fatal error		
-		Not lit	No power supply		
	Green	Lit	Communications connection established		
	Green	Flashing	Communications connection not established		
NS	Red	Lit	Fatal communications error		
	Neu	Flashing	Non-fatal communications error		
—		Not lit	Offline/power supply OFF		

Rotary Switch Settings

Note Factory setting : #00

The node address can be freely set (within the settable range) to any address not used by another node in the network



With the Temperature Input Terminals and Analog Input Terminals, the 10s digit of the node address (decimal) is set using the rotary switch on the left, and the 1s digit is set with the rotary switch on the right. Also, if it is set between 64 and 99, the node address can be set using the Configurator.

Note The rotary switch setting is read when the power is turned ON.

DIP Switch Settings

DRT2-TS04T/-TS04P

TS04T

Input Typ

Pins 1 to 4 : Input Type Settings(NOTE Factory settings : Pins 1 to 4 : OFF)

						TS04P				
)e	Pin 1	Pin 2	Pin 3	Pin 4	1	Input Type	Pin 1	Pin 2	Pin 3	Pin 4

Input Type	Pin 1	Pin 2	Pin 3	Pir	14	Input Type		Pin 1 Pin 2		Pin 3	Pin 4	
R	OFF	OFF	OFF	OF	F	Pt		t OFF		OFF		
S	ON	OFF	OFF	OF	F	J	Pt	ON		OFF		
K1	OFF	ON	OFF	OF	F	P	t2	OFF		ON		
K2	ON	ON	OFF	OF	F	JPt2					Off(fixed	
J1	OFF	OFF	ON	OF	F			ON		ON		
J2	ON	OFF	ON	OF	F	0.		0.1		011		
Т	OFF	ON	ON	OF	F							
E	ON	ON	ON	OF	F	NOTE	Pin3,	4 l	Jse	OFF	only.	
L1	OFF	OFF	OFF	0	N							
L2	ON	OFF	OFF	0	N							
U	OFF	ON	OFF	0	N							
N	ON	ON	OFF	0	N							
W	OFF	OFF	ON	0	N							
В	ON	OFF	ON	0	N							
PL	OFF	ON	ON	0	N							
Not settable	ON	ON	ON	0	N							
Pin 5 : Indication	n mode f	or digit (I	NOTE Fa	actory	setting	: OFF)						
Ir	ndicate s	etting			Pin	5						
1/100 indicate		-			ON							
Normal mode					OF	-						
Pin 6 : °C / °F	indicati	on mode	(NOTE	Facto	ry settir	g : OFF)					
Ir		Pin	6									
°F		-			ON							
°C					OF	-						
Pin 7 : DRT1 co	mpatible	action n	node (1/ [.]	100 in	dicate)	(NOTE I	actory	setting	: C	PFF)		
acti	ion mode	e setting			Pin	7						
DRT1 compati	b l e actio	n(1/100 i	ndicate)		ON	1						
Norma mode					OF	-						
Pin 8 : Selects in	nput type	e setting	method	(NOT	E Facto	ry settin	g : OFF)				
Input	setting	method		Ì	Pin	8						
DIP switch set					ON							
Configurator setting					OFF							
DRT2-AD04H	0											
Pins 1 to 6 : Inp	ut Range	e Settina		Facto	orv setti	nas : Pir	ns 1 to 6	: OFF)			
		y		out 0,1	,				_	out 2,3		
Input Range	e	Pin 1	- <u> </u>	Pin 2	-	'in 3	Pin	4		Pin 5	Pin	6
0 to 5V	-	OFF	_	OFF	_	DFF	OF			OFF	OF	
1 to 5V		ON	_	OFF	-	DFF	0			OFF	OF	
0 to 10V		OFF	_	ON	_	DFF	OF			ON	OF	
4 to 20mA		OFF	_	OFF			OF			OFF	0	

1 to 5V	ON	OFF	OFF	ON	OFF	OFF
0 to 10V	OFF	ON	OFF	OFF	ON	OFF
4 to 20mA	OFF	OFF	ON	OFF	OFF	ON
0 to 20mA	ON	OFF	ON	ON	OFF	ON
Not settable	Oth	er than the al	oove	Othe	er than the ab	ove

Pin 7 : Not use

●Pin 8 : Selects input range setting method (NOTE Factory setting : OFF)

Input setting method	Pin 8
DIP switch setting	ON
Configurator setting	OFF

Note The DIP switch setting is read when the power is turned ON.

Wiring

Terminal Arra ent and Wiring - DRT2-TS04T

Do not touch or remove the cold junction conpensator, the correct temperature data is



Applicable Directives

FMC Directive:

Concept

EMC Directives

OMRON devices that comply with EU Directives also conform to the related EMC standards so that they can be more easily built into other devices or machines. The actual products have been checked for conformity to EMC standards. Whether the products conform to the standards in the

checked for conformity to EMC standards. Whener the products conform to the standards in the system used by the customer, however, must be checked by the customer. EMC-related performance of the OMRON devices that comply with EU Directives will vary depending on the configuration, wiring, and other conditions of the equipment or control panel in which the OMRON devices are installed. The customer must, therefore, perform final checks to confirm that devices and the overall machine conform to EMC standards.

Conformance to EU Directives

DeviceNet products that meet EU directives must be installed as follows: • DeviceNet Units are designed for installation inside control panels. All DeviceNet Units must be installed within acretely service.

 DeviceNet Only are designed for installation inside control panels. All DeviceNet Only finds the installed within control panels.
 Use reinforced insulation or double insulation for the DC power supplies used for the communications power supply, and the I/O power supplies.
 DeviceNet products that meet EU directives also meet the common emission standard(EN50081-2, EN61000-6-4) When DeviceNet products are built into equipment, however, the measure necessary to ensure that the standard is met will vary with the overall configurations of the control panel, the other devices connected to the control panel, and other conditions. This is particularly relevant for radiated emission (10-m regulation). You must therefore confirm that EU directives are met for the overall machine or device.

Compliance with ANSI/ISA 12.12.01 Class I Division 2

- This equipment is suitable for use in Class I, Div.2, Group A, B, C, D or Non-Hazardous Locations
- This equipriter is suitable to do a second and the se
- 4. This device is open-type and is required to be installed in an enclosure suitable for the environment and can only be accessed with the use of a tool or key.
- 1. Cet equipement convient a l'utilisation dans des emplacements de Classe I, Division 2, Groupes A,
- Cettequipernent convient a rulinsation dans des emplacements de classe r, Division 2, Oroupes A, B, C, D, ou ne convient qu'a l'utilisation dans des endroits non dangereux.
 AVERTISSEMENT Risque d'explosion La substitution de composants peut rendre ce materiel inacceptable pour les emplacements de Classe I, Division 2
 AVERTISSEMENT Risque d'explosion Avant de debrancher l'equipement, couper le courant ou
- Sassure que l'emplacement est designe non dangereux.
 Ce dispositif est de type ouvert et doit etre installe dans un coffret adapte a l'environnement et auquel on ne pourra acceder uniquement au moyen d'un outil ou d'une cle.

Suitability for Use

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the products in the customer's application or use of the product. Take all necessary steps to determine the suitability of the product for the systems, machines, and

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used. Know and observe all prohibitions of use applicable to this product. NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM. See also Product catalog for Warranty and Limitation of Liability

OMRON

OMRON Corporation Industrial Automation Company Tokyo, JAPAN Contact: www.ia.omron.com

Regional Headquarters

OMRON EUROPE B.V. Wegalaan 67-69.2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300 Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road #05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65)6835-3011

Fax: (65)6835-2711

OMRON ELECTRONICS LLC

2895 Greenspoint Parkway, Suite 200 Hoffman Estates, IL 60169 U.S.A Tel: (1)847-843-7900 Fax: (1)847-843-7787

OMRON (CHINA) CO., LTD.

Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86)21-5037-2222 Fax: (86)21-5037-2200

Note: Specifications subject to change without notice.